



LOOP SCHEDULE			
MANIFOLD	LOOP #	LENGTH	PANEL AREA
1	1	188'-5"	193 SQ. FT.
	2	55'-7"	51 SQ. FT.
	3	147'-2"	150 SQ. FT.
2	4	313'-2"	338 SQ. FT.
	5	272'-11"	263 SQ. FT.
	6	82'-9"	87 SQ. FT.
3	7	219'-7"	233 SQ. FT.
	8	253'-6"	265 SQ. FT.
	9	205'-11"	
4	10	273'-4"	


NOTE:
DEDUCT 25 SQ. FT. PANEL AREA
FROM LOOP 4 FOR ISLAND.

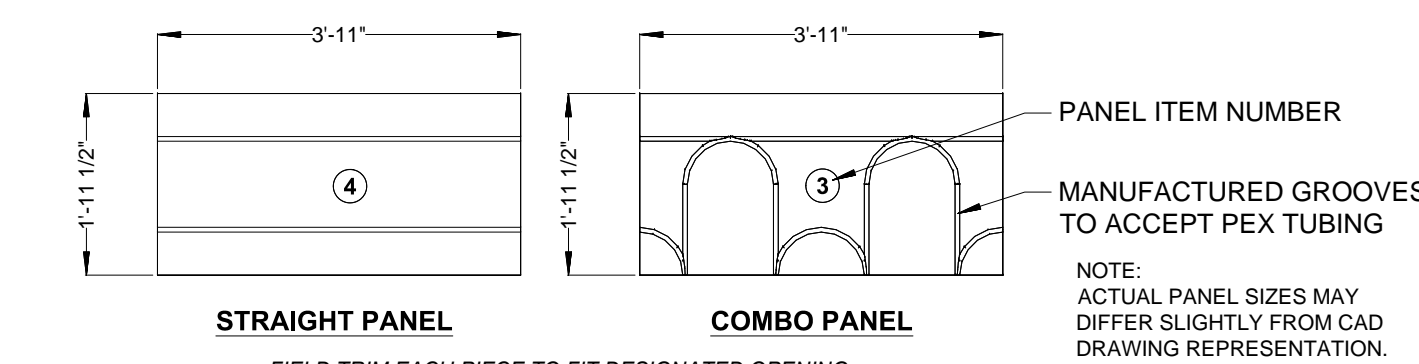

STANDARD ECOWARM SHIPPED PANEL TYPES

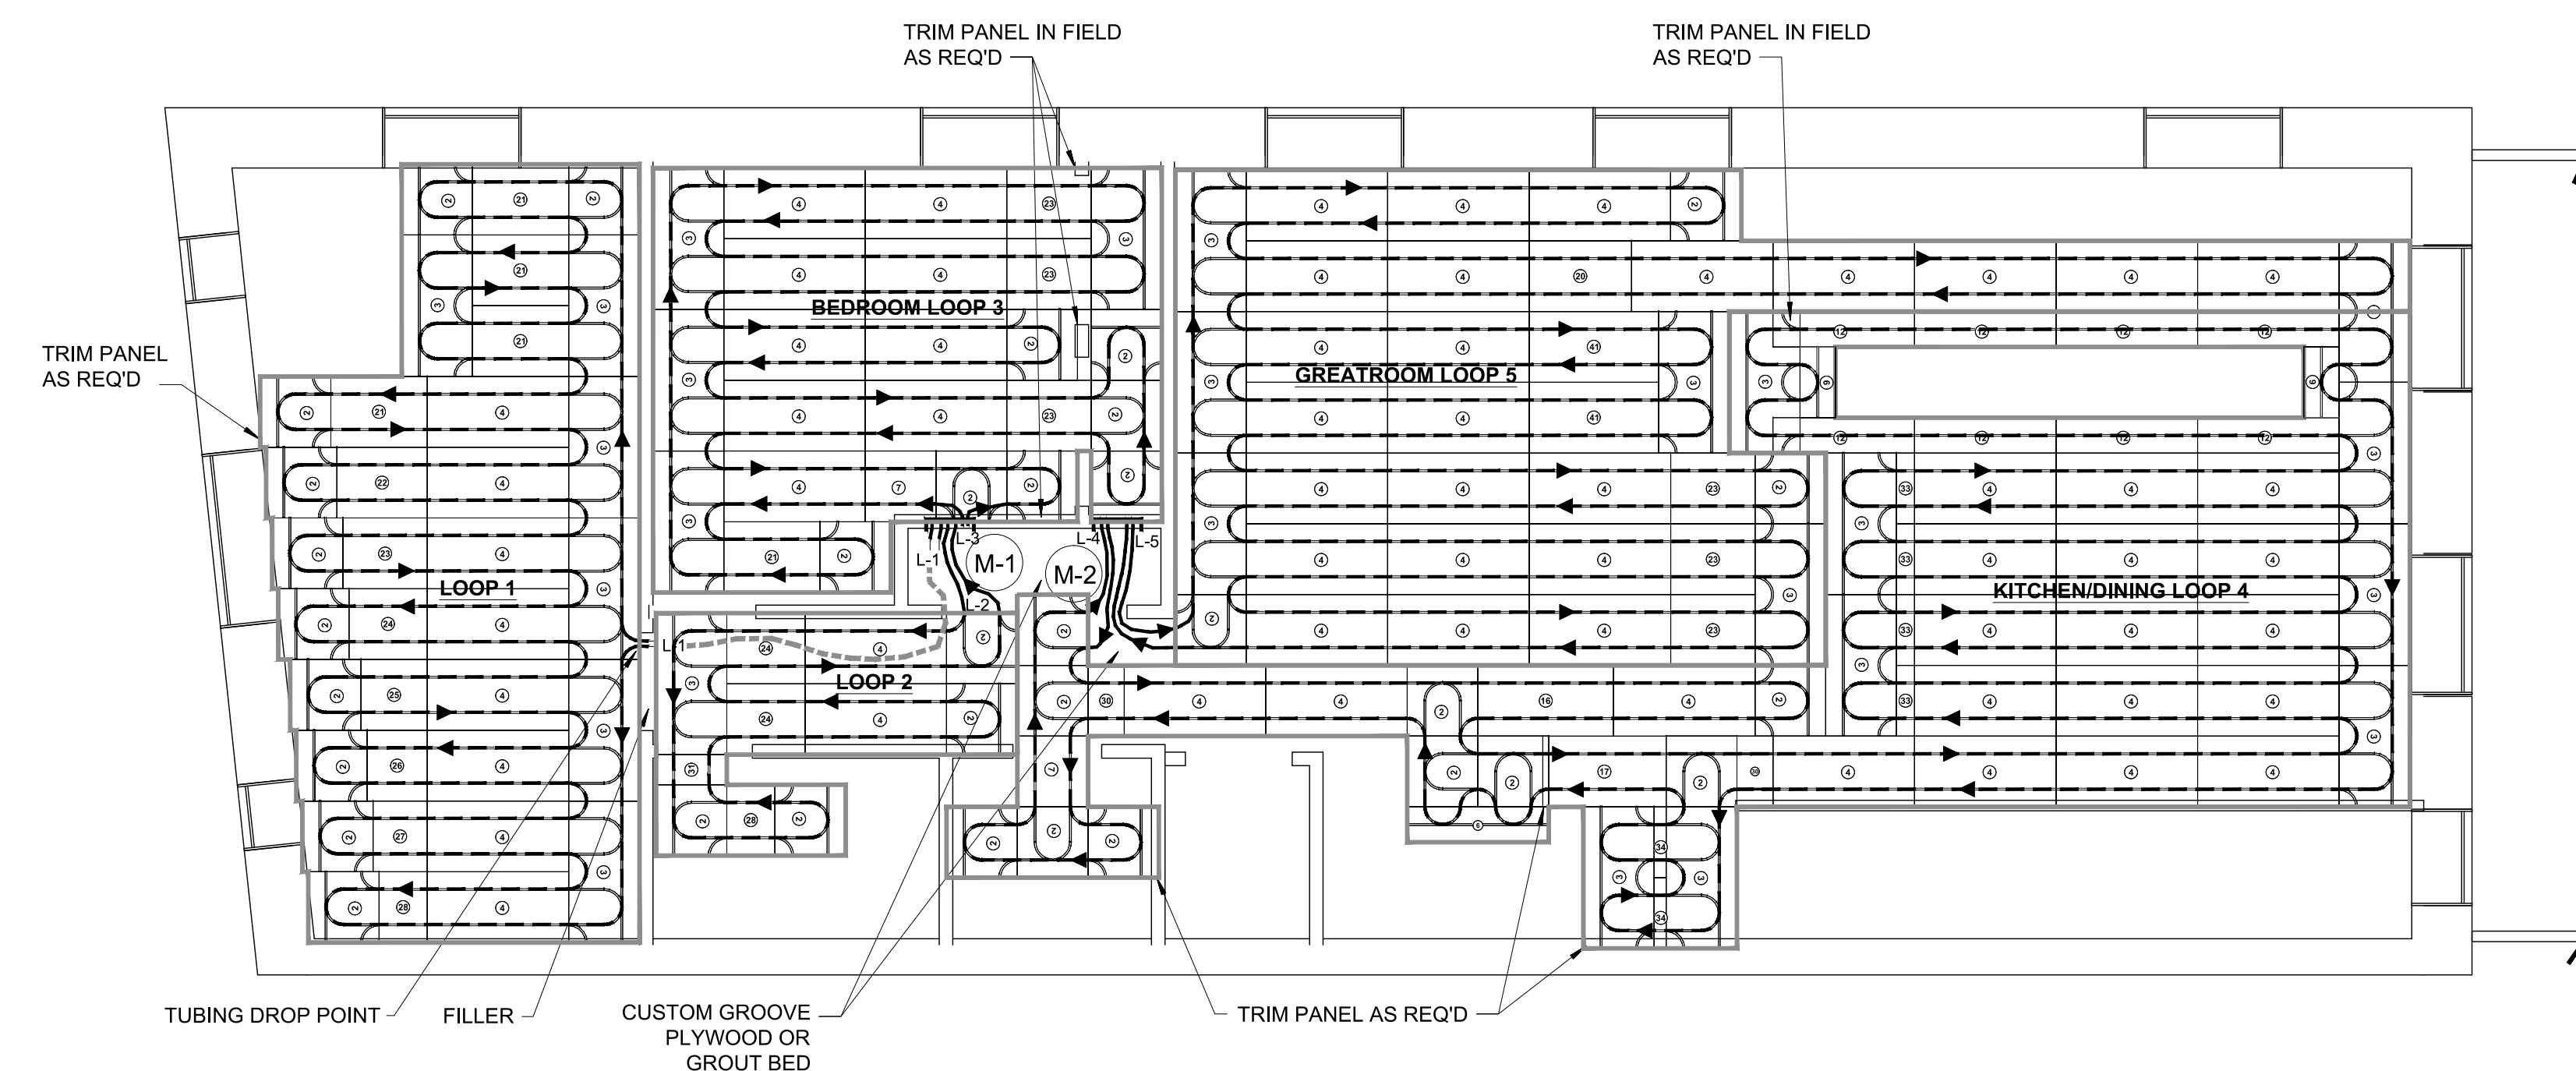


SECOND FLOOR PANEL LAYOUT

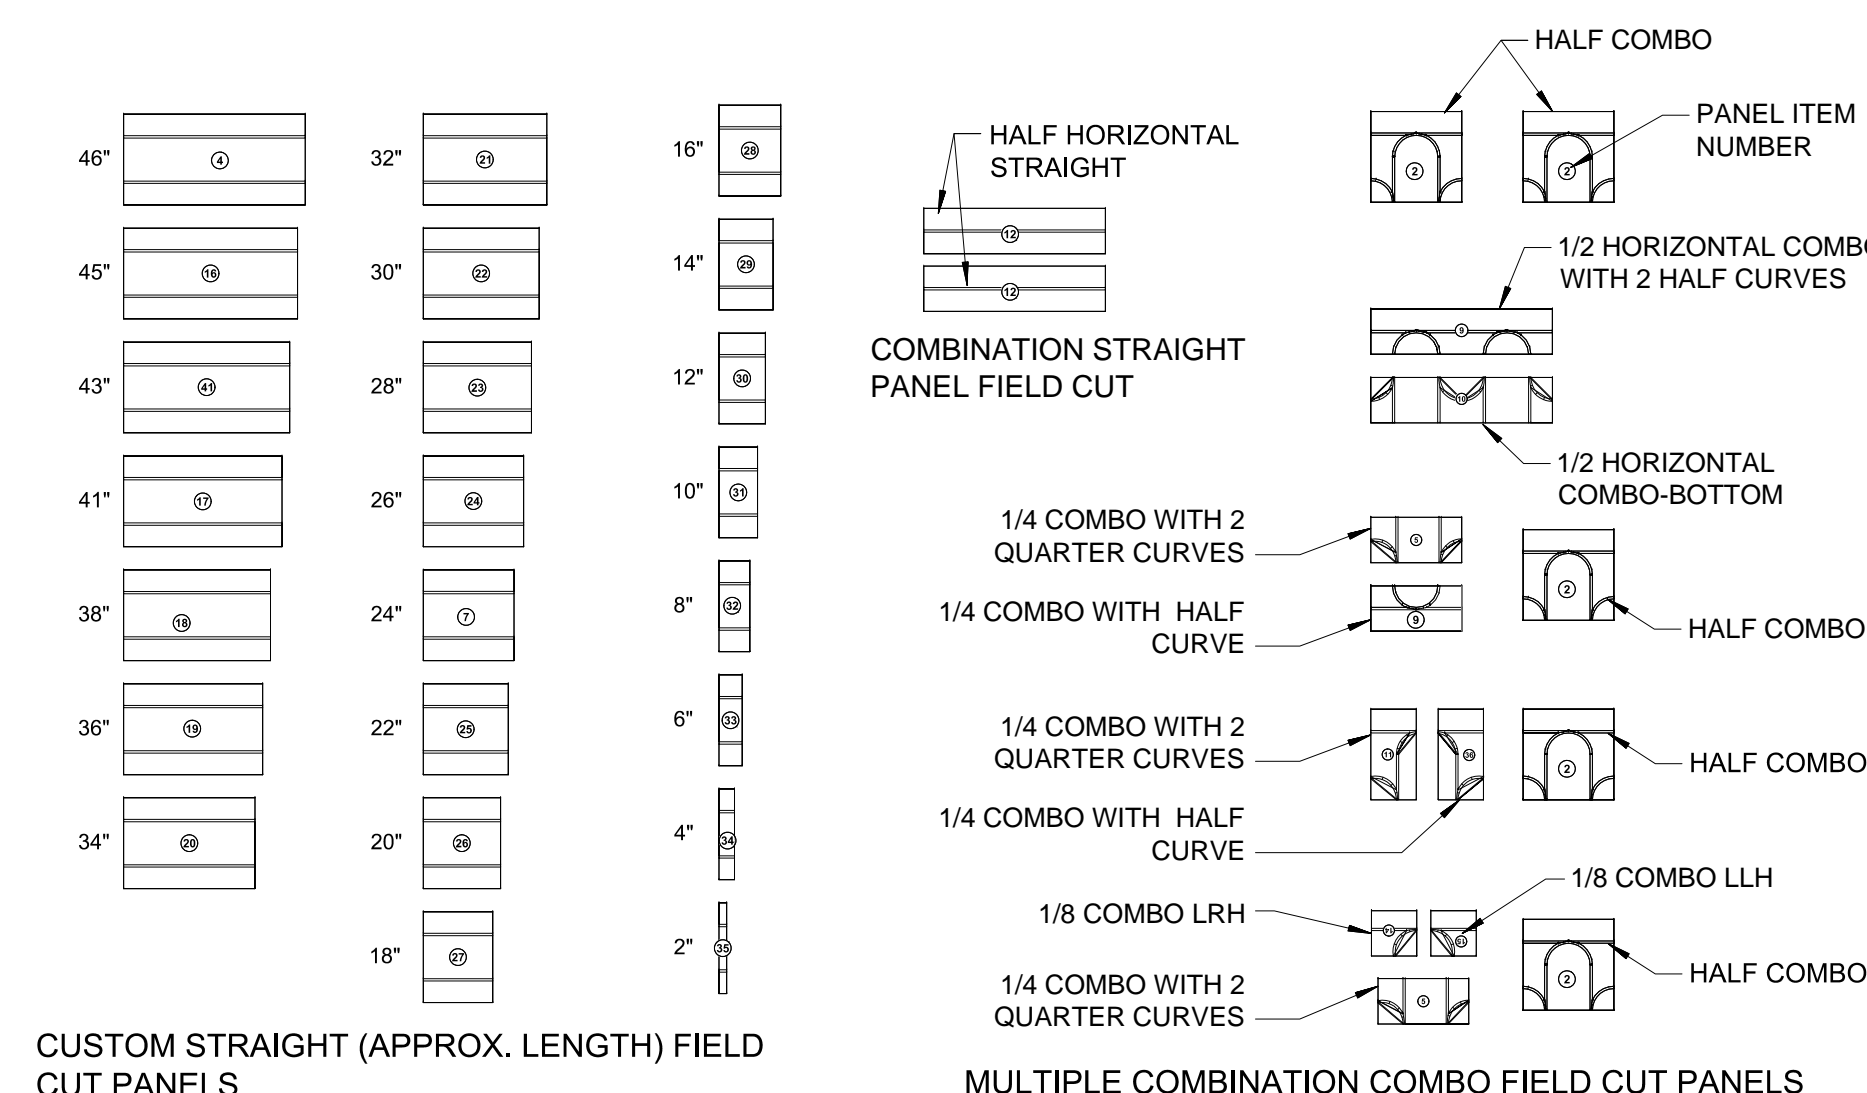

PANEL TYPES TO BE FIELD CUT FROM STRAIGHT AND COMBO PANELS

PANEL SIZES SHOWN ARE APPROXIMATE. FIELD MEASURE EACH OPENING AND CUSTOM CUT EACH PANEL TO FIT.

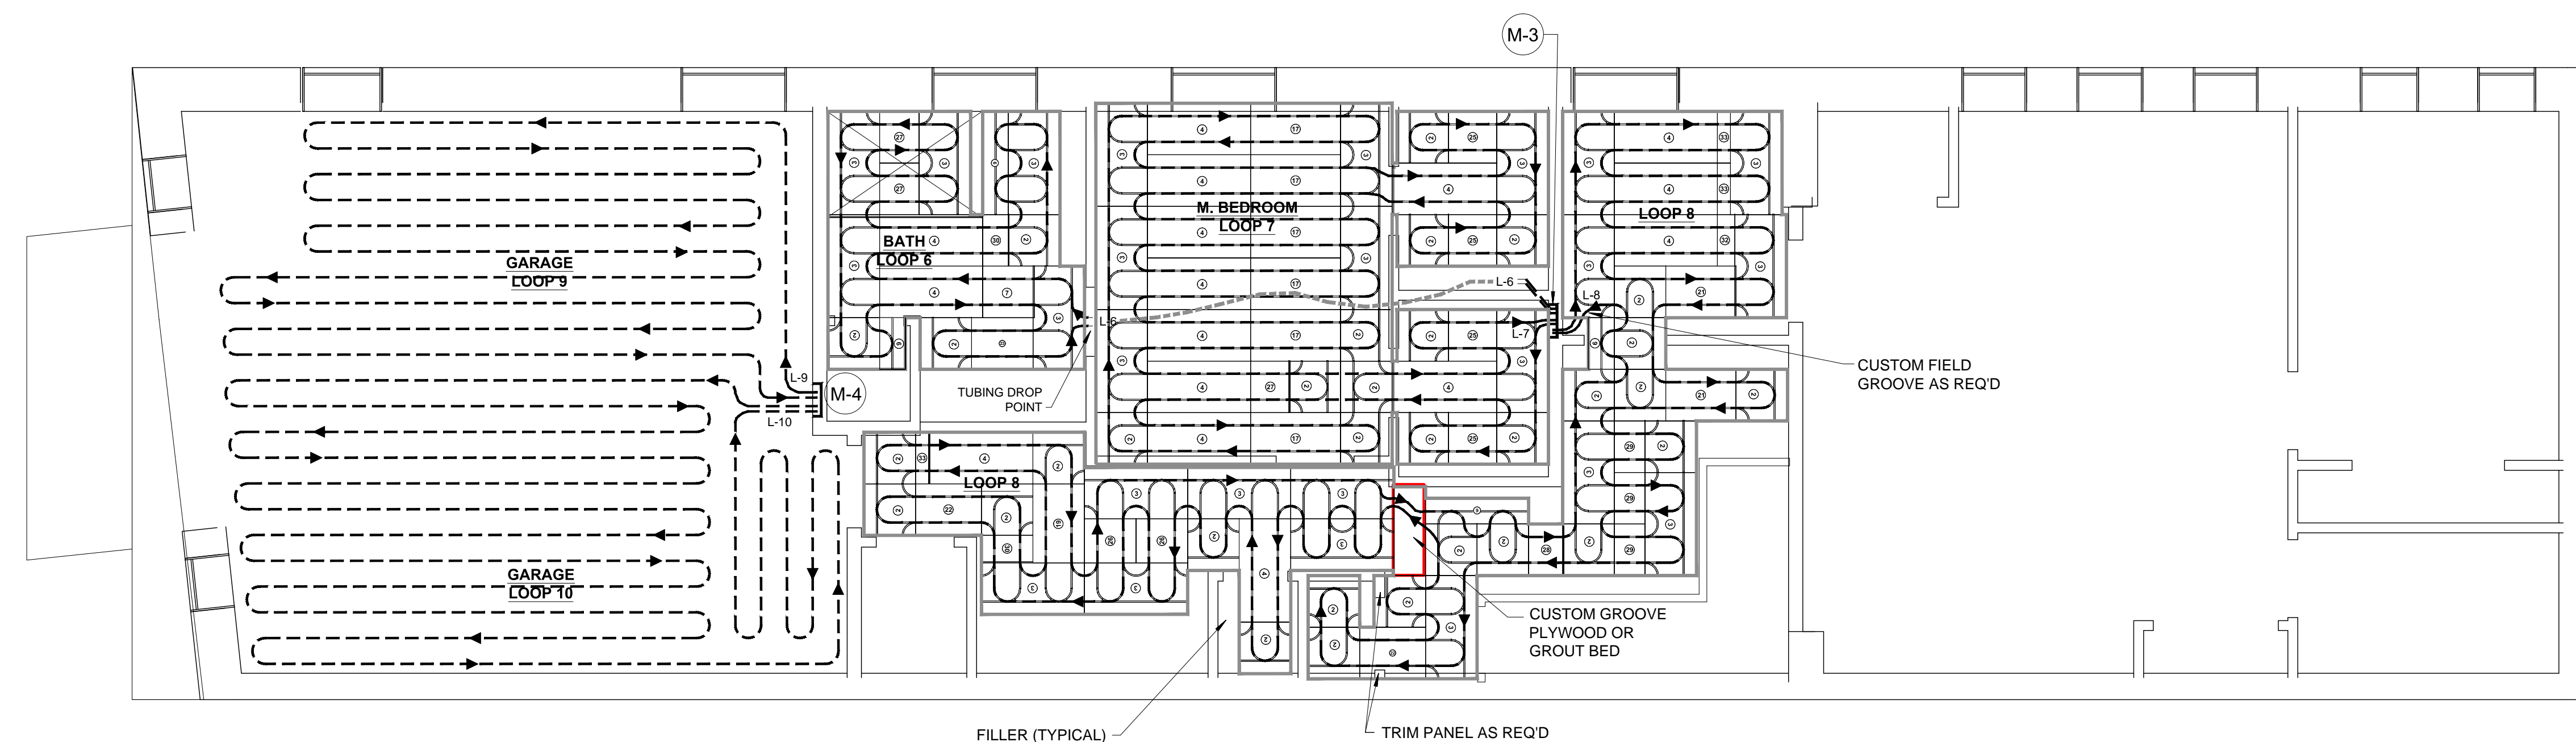

FIRST FLOOR PANEL LAYOUT
SCALE: 1/4" = 1'-0"

ECOWARM FLOOR PANEL NOTES:

- 1-STRAIGHT PANEL LENGTHS SHOWN ARE APPROXIMATE. FIELD MEASURE AND CUSTOM CUT EACH PANEL TO FIT DESIGNATED LOCATION. SEE INSTALLATION AND DESIGN MANUAL FOR DETAILED PROCEDURES.
- 2-WHEN CALCULATING FIELD CUT COMBO PANELS DEDUCT FOR SAW CUT WIDTH.
- 3-EXCESSIVE WASTE MAY DICTATE NEED TO UTILIZE MULTIPLE SALVAGED PANEL PIECES (2" MIN.) TO FILL PANEL LOCATIONS.
- 4-THE LAYOUTS PROVIDED ARE BEST ESTIMATE ONLY. ALWAYS REFER TO THE DESIGN AND INSTALLATION MANUAL FOR ALL DESIGN AND INSTALLATION RELATED INFORMATION.

THE DESIGN AND INSTALLATION MANUAL SUPERCEDES ANY LAYOUT NOTATIONS.

